

KTR-N 4 Sheet: 1


40226 EN 1 of 24

Edition: 6


# **ROTEX**®

Torsionally flexible jaw couplings type AH and their combinations

according to directive 2014/34/EU and UK directive SI 2016 No. 1107

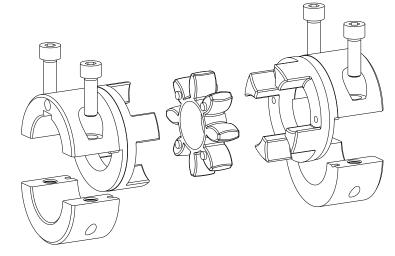

Type AH, Size 19 - 90

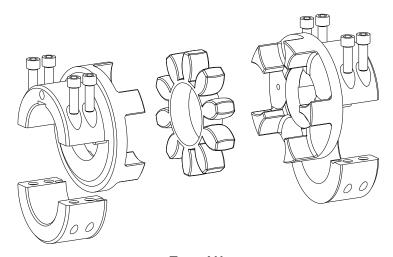

Type AH, Size 100 - 125

Please observe protection	Drawn:	2022-07-05 Pz/Wb	Replacing:	KTR-N dated 2019-10-09
note ISO 16016.	Verified:	2022-08-05 Pz	Replaced by:	



KTR-N 40226 EN Sheet: 2 of 24 Edition: 6

**ROTEX**® is a torsionally flexible jaw coupling. It is able to compensate for shaft misalignment, for example caused by manufacturing inaccuracies, thermal expansion, etc.

Type AH allows to replace a spider/coupling without having to disassemble the driving resp. driven machine.

### Table of contents

1	Technical data	3
2	Advice	5
	<ul> <li>2.1 General advice</li> <li>2.2 Safety and advice symbols</li> <li>2.3 General hazard warnings</li> <li>2.4 Intended use</li> <li>2.5 Coupling selection</li> <li>2.6 Reference to EC Machinery Directive 2006/42/EC</li> </ul>	5 5 6 6
3	Storage, transport and packaging	7
	<ul><li>3.1 Storage</li><li>3.2 Transport and packaging</li></ul>	7 7
4	Assembly	7
	<ul> <li>4.1 Components of the coupling</li> <li>4.2 Advice for finish bore</li> <li>4.3 Assembly of the coupling (general)</li> <li>4.4 Assembly of type AH</li> <li>4.5 Displacements - alignment of the couplings</li> </ul>	7 9 9 10 11
5	Start-up	12
6	Breakdowns, causes and elimination	14
7	Disposal	16
8	Maintenance and service	16
9	Spares inventory, customer service addresses	16
10	Enclosure A	
	Advice and instructions regarding the use in potentially explosive atmosphere	s 17
	10.1 Intended use in potentially explosive atmospheres	17
	10.2 Inspection intervals for couplings in potentially explosive atmospheres 10.3 Standard values of wear	18 20
	10.4 marking of coupling for potentially explosive atmospheres 10.5 EU Certificate of conformity 10.6 UK Declaration of conformity	21 23 24

Please observe protection	Drawn:	2022-07-05 Pz/Wb	Replacing:	KTR-N dated 2019-10-09
note ISO 16016.	Verified:	2022-08-05 Pz	Replaced by:	



40226 EN KTR-N 3 of 24 Sheet: Edition: 6

# Technical data

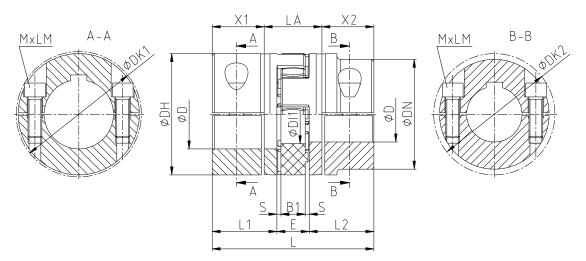


Illustration 1: ROTEX® type AH (material: steel)

**Table 1: Dimensions - Material steel** 

	Spide	er 1) (compone	ent 2)			Di	mensions [m	m]		
Size		ated torque [N					General			
	92 ShA	98 ShA	64 ShD	L	L1, L2	E	B1	S	DH	DI1
19	10	17	21	66	25	16	12	2.0	40	18
24	35	60	75	78	30	18	14	2.0	55	27
28	95	160	200	90	35	20	15	2.5	65	30
38	190	325	405	114	45	24	18	3.0	80	38
42	265	450	560	126	50	26	20	3.0	95	46
48	310	525	655	140	56	28	21	3.5	105	51
55	410	685	825	160	65	30	22	4.0	120	60
65	625	940	1175	185	75	35	26	4.5	135	68
75	1280	1920	2400	210	85	40	30	5.0	160	80
90	2400	3600	4500	245	100	45	34	5.5	200	100

				Dimensio	ns [mm]			
Size	Max. finish bore D			General			Cap screws DII	N EN ISO 4762
	2)	DN	DK1	DK2	X1, X2	LA	MxLM	T <sub>A</sub> [Nm]
19	20	-	46.0	-	17.5	31	M6x16	14
24	28	-	57.5	-	22.5	33	M6x20	14
28	38	-	73.0	-	25.5	39	M8x25	35
38	45	-	83.5	-	35.5	43	M8x30	35
42	50	85	-	93.5	39.0	48	M10x30	69
42	55	-	97.0	-	39.0	40	M10x35	09
48	55	95	-	105.0	45.0	50	M12x35	120
40	60	-	108.5	-	45.0	50	M12x40	120
55	65	110	-	119.5	50.0	60	M12x40	120
55	70	-	122.0	-	50.0	60	M12x45	120
65	70	115	-	123.5	60.0	65	M12x40	120
00	80	-	132.5	-	60.0	65	M12x45	120
75	80	135	-	147.5	67.5	75	M16x50	295
73	90	-	158.0	-	07.5	75	IVITOXOU	295
90	90	160	-	176.0	81.5	82	M20x60	580
90	110	-	197.0	-	01.5	02	IVI∠UXOU	360

<sup>1)</sup> Maximum torque of the coupling  $T_{Kmax.}$  = Rated torque of the coupling  $T_{KN}$  x 2 2) Bores H7 with keyway to DIN 6885 sheet 1 [JS9]

Please observe protection	Drawn:	2022-07-05 Pz/Wb	Replacing:	KTR-N dated 2019-10-09
note ISO 16016.	Verified:	2022-08-05 Pz	Replaced by:	



KTR-N 40226 EN Sheet: 4 of 24 Edition: 6

#### Technical data

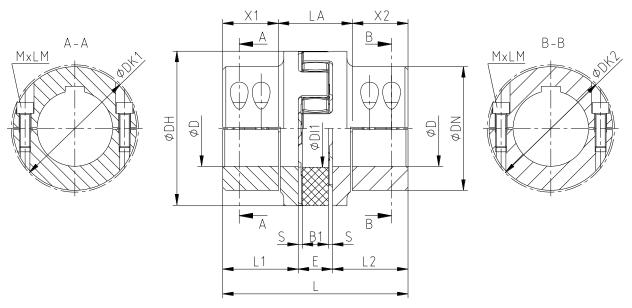


Illustration 2: ROTEX® type AH (material: EN-GJS-400-15)

Table 2: Dimensions - Material EN-GJS-400-15

	Spide	er 1) (compone	ent 2)			Di	mensions [m	m]		
Size R		Rated torque [Nm]					General			
	92 ShA	98 ShA	64 ShD	L	L1, L2	E	B1	S	DH	DI1
100	3300	4950	6185	270	110	50	38	6.0	225	113
110	4800	7200	9000	295	120	55	42	6.5	255	127
125	6650	10000	12500	340	140	60	46	7.0	290	147

ſ					Dimension	ns [mm]			
ı	Size	Max. finish bore D			General			Cap screws DII	N EN ISO 4762
L		2)	DN	DK1	DK2	X1, X2	LA	MxLM	T <sub>A</sub> [Nm]
I	100	110	180	П	185.5	84	102	M16x50	295
	110	120	200	ī	208.0	90	115	M20x60	580
Ī	125	140	230	-	242.5	105	130	M24x70	1000

<sup>1)</sup> Maximum torque of the coupling  $T_{Kmax.}$  = Rated torque of the coupling  $T_{KN}$  x 2 2) Bores H7 with keyway to DIN 6885 sheet 1 [JS9]



ROTEX® couplings with attachments that can generate heat, sparks and static charging (e. g. combinations with brake drums, brake disks, overload systems such as torque limiters, fan impellers etc.) are not permitted for the use in potentially explosive atmospheres.

A separate analysis must be performed.

Please observe protection	Drawn:	2022-07-05 Pz/Wb	Replacing:	KTR-N dated 2019-10-09
note ISO 16016.	Verified:	2022-08-05 Pz	Replaced by:	



KTR-N 40226 EN Sheet: 5 of 24 Edition: 6

## 2 Advice

### 2.1 General advice

Please read through these operating/assembly instructions carefully before you start up the coupling. Please pay special attention to the safety instructions!



The **ROTEX**® coupling is suitable and approved for the use in potentially explosive atmospheres. When using the coupling in potentially explosive atmospheres, observe the special advice and instructions regarding safety in enclosure A.

The operating/assembly instructions are part of your product. Please store them carefully and close to the coupling. The copyright for these operating/assembly instructions remains with KTR.

### 2.2 Safety and advice symbols




Warning of potentially explosive atmospheres

This symbol indicates notes which may contribute to preventing bodily injuries or serious bodily injuries that may result in death caused by explosion.



Warning of personal injury

This symbol indicates notes which may contribute to preventing bodily injuries or serious bodily injuries that

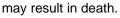



Warning of product damages

This symbol indicates notes which may contribute to preventing material or machine damage.



General advice

This symbol indicates notes which may contribute to preventing adverse results or conditions.

#### 2.3 General hazard warnings



With assembly, operation and maintenance of the coupling it has to be made sure that the entire drive train is secured against accidental switch-on. You may be seriously hurt by rotating parts. Make absolutely sure to read through and observe the following safety indications.

- All operations on and with the coupling have to be performed taking into account "safety first".
- Make sure to switch off the power pack before you perform your work on the coupling.
- Secure the power pack against accidental switch-on, e. g. by providing warning signs at the place of switch-on or removing the fuse for current supply.
- Do not reach into the operating area of the coupling as long as it is in operation.
- Secure the coupling against accidental contact. Provide for the necessary protection devices and covers.

Please observe protection	Drawn:	2022-07-05 Pz/Wb	Replacing:	KTR-N dated 2019-10-09
note ISO 16016.	Verified:	2022-08-05 Pz	Replaced by:	



KTR-N 40226 EN Sheet: 6 of 24 Edition: 6

### 2 Advice

### 2.4 Intended use

You may only assemble, operate and maintain the coupling if you

- have carefully read through the operating/assembly instructions and understood them
- are technically qualified and specifically trained (e. g. safety, environment, logistics)
- · are authorized by your company

The coupling may only be used in accordance with the technical data (see chapter 1). Unauthorized modifications on the coupling design are not admissible. We will not assume liability for any damage that may arise. In the interest of further development we reserve the right for technical modifications.

The **ROTEX**® described in here corresponds to the state of the art at the time of printing of these operating/assembly instructions.

### 2.5 Coupling selection



For a permanent and failure-free operation of the coupling it must be selected according to the selection instructions (according to DIN 740 part 2) for the particular application (see catalogue drive technology "ROTEX®").

If the operating conditions (performance, speed, modifications on engine and machine) change, the coupling selection must be reviewed.

Make sure that the technical data regarding torque refer to the spider only. The transmittable torque of the shaft-hub-connection must be reviewed by the customer and is subject to his responsibility.

For drives subject to torsional vibrations (drives with cyclic stress due to torsional vibrations) it is necessary to perform a torsional vibration calculation to ensure a reliable selection. Typical drives subject to torsional vibrations are e. g. drives with diesel engines, piston pumps, piston compressors etc. If requested, KTR will perform the coupling selection and the torsional vibration calculation.

#### 2.6 Reference to EC Machinery Directive 2006/42/EC

The couplings supplied by KTR should be considered as components, not machines or partly completed machines according to EC Machinery Directive 2006/42/EC. Consequently KTR does not have to issue a declaration of incorporation. For details about safe assembly, start-up and safe operation refer to the present operating/assembly instructions considering the warnings.

Please observe protection	Drawn:	2022-07-05 Pz/Wb	Replacing:	KTR-N dated 2019-10-09
note ISO 16016.	Verified:	2022-08-05 Pz	Replaced by:	



KTR-N 40226 EN Sheet: 7 of 24 Edition: 6

3 Storage, transport and packaging

## 3.1 Storage

The coupling hubs are supplied in preserved condition and can be stored in a dry and roofed place for 6 - 9 months.

The features of the coupling spiders (elastomers) remain unchanged for up to 5 years with favourable storage conditions.



The storage rooms must not include any ozone-generating devices like e. g. fluorescent light sources, mercury-vapour lamps or electrical high-voltage appliances. Humid storage rooms are not suitable.

Make sure that condensation is not generated. The best relative air humidity is less than 65 %.

### 3.2 Transport and packaging



In order to avoid any injuries and any kind of damage always make use of proper transport and lifting equipment.

The couplings are packed differently each depending on size, number and kind of transport. Unless otherwise contractually agreed, packaging will follow the in-house packaging specifications of KTR.

## 4 Assembly

The coupling is generally supplied in individual parts. Before assembly the coupling has to be inspected for completeness.

### 4.1 Components of the coupling

#### Components of ROTEX® type AH, size 19 - 90

Component	Quantity	Description
1	2	Clamping hub type H with half length tapered groove pin DIN EN ISO 8745 (2 pieces)
2	1	Spider
3	2 <sup>1)</sup>	Cap screws DIN EN ISO 4762

<sup>1)</sup> each clamping hub

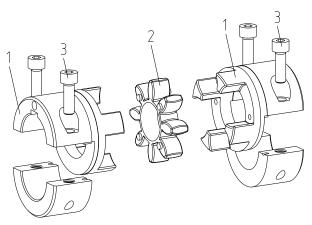


Illustration 3: ROTEX® type AH, size 19 - 90

Please observe protection	Drawn:	2022-07-05 Pz/Wb	Replacing:	KTR-N dated 2019-10-09
note ISO 16016.	Verified:	2022-08-05 Pz	Replaced by:	



KTR-N 40226 EN Sheet: 8 of 24 Edition: 6

# 4 Assembly

# 4.1 Components of the coupling

# Components of ROTEX® type AH, size 100 - 125

Component	Quantity	Description
1	2	Clamping hub type H with half length tapered groove pin DIN EN ISO 8745 (2 pieces)
2	1	Spider
3	4 1)	Cap screws DIN EN ISO 4762

<sup>1)</sup> each clamping hub

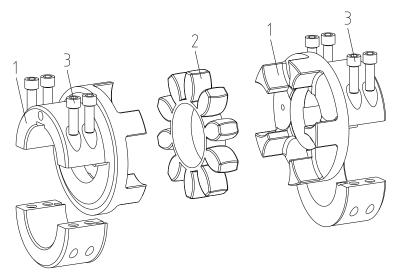


Illustration 4: ROTEX® type AH, size 100 - 125



Hubs without feather keyways may be used in category 3 <u>only</u> and are marked with category 3 accordingly.

#### **Features of standard spiders**

Cnider hardness		ore A		nore A		nore D
Spider hardness (Shore)	T-PUR <sup>®</sup> (orange)	PUR (yellow)	T-PUR <sup>®</sup> (purple)	PUR (red)	T-PUR <sup>®</sup> (light green)	PUR (natural white <sup>1)</sup> )
Marking (colour)		*		*		2

1) Natural white with green marking of teeth

Please observe protection	Drawn:	2022-07-05 Pz/Wb	Replacing:	KTR-N dated 2019-10-09
note ISO 16016.	Verified:	2022-08-05 Pz	Replaced by:	



KTR-N 40226 EN Sheet: 9 of 24 Edition: 6

4 Assembly

### 4.2 Advice for finish bore



The maximum permissible bore diameters D (see chapter 1 - technical data) must not be exceeded. If these figures are disregarded, the coupling may tear. Rotating particles may cause danger to life.

- Hub bores machined by the customer have to observe concentricity resp. axial runout (see illustration 5).
- Make absolutely sure to observe the figures for ØD.
- Carefully align the hubs when the finish bores are drilled.

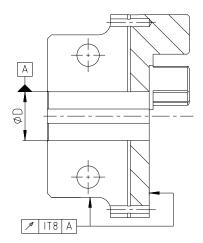


Illustration 5: Concentricity and axial runout



The customer bears the sole responsibility for all machining processes performed subsequently on unbored or pilot bored as well as finish machined coupling components and spare parts. KTR does not assume any warranty claims resulting from insufficient remachining.



KTR supplies unbored or pilot bored coupling components and spare parts only upon explicit request of the customer. These parts are additionally marked with the symbol ①.

Reference to unbored resp. pilot bored coupling components with explosion protection marking:

Basically the company KTR Systems GmbH supplies couplings resp. coupling hubs with explosion protection marking as an unbored or pilot bored type only on explicit request of the customer. The prerequisite is a declaration of exemption submitted by the customer assuming any responsibility and liability for respective remachining performed on the product of KTR Systems GmbH.

## 4.3 Assembly of the coupling (general)



We recommend to inspect bores, shaft, keyway and feather key for dimensional accuracy before assembly.



Please pay attention to the ignition risk in potentially explosive atmospheres!



With the assembly make sure that the distance dimension E (see table 1 and 2) is observed to allow for axial clearance of the spider when in operation. Disregarding this advice may cause damage to the coupling.



If the shaft diameters with inserted feather key are smaller than dimension DI1 (see table 1 and 2) of the spider, one or two shaft ends may protrude into the spider.



If used in potentially explosive atmospheres all screw connections must be secured against working loose additionally, e. g. conglutinating with Loctite (average strength).

Please observe protection	Drawn:	2022-07-05 Pz/Wb	Replacing:	KTR-N dated 2019-10-09
note ISO 16016.	Verified:	2022-08-05 Pz	Replaced by:	



KTR-N 40226 EN Sheet: 10 of 24

Edition: 6

## 4 Assembly

### 4.4 Assembly of type AH

• Remove the half shells from the hub body (see illustration 6).

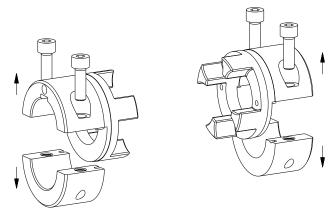


Illustration 6: Disassembly of shells

• Fit the hub body along with the spider (see illustration 7).

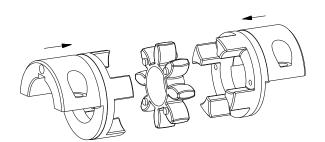


Illustration 7: Assembly of hub bodies, spiders and DKM-H spacer

- Mount the fitted unit along with the half shells and the clamping screws on the shaft ends of the driving and driven machine (see illustration 8).
- Hand-tighten the components first until the hub bodies with the half shells fit closely to the shaft.
- Shift the clamping hubs type H in axial direction until the dimension LZS-DKM-H specified in table 1 or 2 is achieved.
- Secure the clamping hubs type H by tightening the clamping screws reciprocally. The screws have to be tightened at the tightening torques T<sub>A</sub> specified in table 1 or 2 by means of a suitable torque wrench.

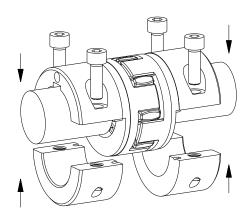


Illustration 8: Assembly of subassembly on the shafts



Having started up the coupling, the wear of spider has to be inspected at regular maintenance intervals and the spider has to be replaced, if necessary.



Hubs without feather keyways may be used in category 3 <u>only</u> and are marked with category 3 accordingly.

Please observe protection	Drawn:	2022-07-05 Pz/Wb	Replacing:	KTR-N dated 2019-10-09
note ISO 16016.	Verified:	2022-08-05 Pz	Replaced by:	



KTR-N 40226 EN Sheet: 11 of 24 Edition: 6

## 4 Assembly

## 4.5 Displacements - alignment of the couplings

The displacement figures specified in tables 3 and 4 provide for sufficient safety to compensate for external influences like, for example, thermal expansion or foundation settling.






In order to ensure a long service life of the coupling and avoid hazards with the use in potentially explosive atmospheres, the shaft ends must be accurately aligned. Please absolutely observe the displacement figures specified (see tables 3 and 4). If the figures are exceeded, the coupling will be damaged.

The more accurate the alignment of the coupling, the longer is its service life. If used in potentially explosive atmospheres for explosion group IIC, only half of the displacement figures (see tables 3 and 4) is permissible.


#### Please note:

- The displacement figures specified in tables 3 and 4 are maximum figures which must not arise in parallel. If radial and angular displacements arise simultaneously, the permissible displacement values may only be used proportionally (see illustration 7).
- Inspect with a dial gauge, ruler or feeler whether the permissible displacement figures of tables 3 and 4 can be observed.

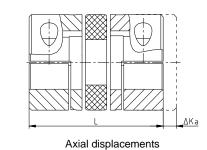






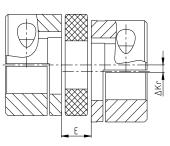

Radial displacements

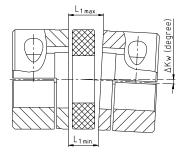

Angular displacements

$$\Delta K_w = L_{1max.} - L_{1min.}$$
 [mm]

Illustration 9: Displacements

Examples of the displacement combinations specified in illustration 10:

Example 1:  $\Delta K_r = 30 \%$ 


 $\Delta K_w = 70 \%$ 

Example 2:  $\Delta K_r = 60 \%$ 

 $\Delta K_w = 40 \%$ 

 $\Delta K_{\text{total}} = \Delta K_r + \Delta K_w \le 100 \%$ 

Illustration 10: Combinations of displacement

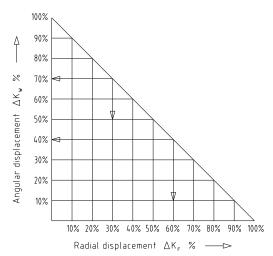

Please observe protection	Drawn:	2022-07-05 Pz/Wb	Replacing:	KTR-N dated 2019-10-09
note ISO 16016.	Verified:	2022-08-05 Pz	Replaced by:	



KTR-N 40 Sheet: 12 Edition: 6

40226 EN 12 of 24

Assembly

### 4.5 Displacements - alignment of the couplings

Table 3: Displacement figures for 92 and 98 Shore A

Size	<b>!</b>	19	24	28	38	42	48	55	65	75	90	100	110	125
Max. axial displa	acement ∆K <sub>a</sub>	-0.5	-0.5	-0.7	-0.7	-1.0	-1.0	-1.0	-1.0	-1.5	-1.5	-1.5	-2.0	-2.0
[mm	_	+1.2	+1.4	+1.5	+1.8	+2.0	+2.1	+2.2	+2.6	+3.0	+3.4	+3.8	+4.2	+4.6
Max. radial displacement	1500 rpm	0.20	0.22	0.25	0.28	0.32	0.36	0.38	0.42	0.48	0.50	0.52	0.55	0.60
$\Delta K_r$ [mm] with	3000 rpm	0.13	0.15	0.17	0.19	0.21	0.25	0.26	0.28	0.32	0.34	0.36	0.38	-
Max. angular displacement	[degree]	1.2	0.9	0.9	1.0	1.0	1.1	1.1	1.2	1.2	1.2	1.2	1.3	1.3
$\Delta K_w$ with n=1500 rpm	[mm]	0.82	0.85	1.05	1.35	1.70	2.00	2.30	2.70	3.30	4.30	4.80	5.60	6.50
Max. angular displacement	[degree]	1.1	0.8	0.8	0.9	0.9	1.0	1.0	1.1	1.1	1.1	1.1	1.2	-
$\Delta K_w$ with n=3000 rpm	[mm]	0.70	0.75	0.85	1.10	1.40	1.60	2.00	2.30	2.90	3.80	4.20	5.00	-

Table 4: Displacement figures for 64 Shore D

Size		19	24	28	38	42	48	55	65	75	90	100	110	125
Max. axial displa	icement ∆K <sub>a</sub>	-0.5	-0.5	-0.7	-0.7	-1.0	-1.0	-1.0	-1.0	-1.5	-1.5	-1.5	-2.0	-2.0
[mm]		+1.2	+1.4	+1.5	+1.8	+2.0	+2.1	+2.2	+2.6	+3.0	+3.4	+3.8	+4.2	+4.6
Max. radial displacement	1500 rpm	0.13	0.15	0.18	0.21	0.23	0.25	0.27	0.30	0.34	0.36	0.37	0.40	0.43
$\Delta K_r$ [mm] with	3000 rpm	0.09	0.10	0.13	0.15	0.16	0.18	0.19	0.21	0.24	0.25	0.26	0.28	-
Max. angular displacement	[degree]	1.1	0.8	0.8	0.9	0.9	1.0	1.0	1.1	1.1	1.1	1.1	1.2	1.2
$\Delta K_w$ with n=1500 rpm	[mm]	0.77	0.77	0.90	1.25	1.40	1.80	2.00	2.50	3.00	3.80	4.30	5.30	6.00
Max. angular displacement	[degree]	1.0	0.7	0.7	0.8	0.8	0.9	0.9	1.0	1.0	1.0	1.0	1.1	-
$\Delta K_w$ with n=3000 rpm	[mm]	0.70	0.67	0.80	1.00	1.30	1.60	1.80	2.20	2.70	3.50	4.00	4.90	-

## 5 Start-up

Before start-up of the coupling, inspect the alignment and the distance dimension E and adjust, if necessary, and also inspect all screw connections for the tightening torques specified.



If used in potentially explosive atmospheres all screw connections must be secured against working loose additionally, e. g. conglutinating with Loctite (average strength).

Finally the coupling protection against accidental contact must be fitted. It is required in accordance with DIN EN ISO 12100 (Safety of Machinery) and directives 2014/34/EU and SI 2016 No. 1107 and must protect against

- · access with the little finger
- falling down of solid foreign objects.

The coupling protection is not part of KTR's scope of delivery and is the customer's responsibility. It must have sufficient distance to the rotating components to avoid contact safely. Depending on the outside diameter DH of the coupling, we recommend the following minimum distance:

ØDH to 50 mm = 6 mm, ØDH 50 mm to 120 mm = 10 mm, ØDH from 120 mm = 15 mm.

Please check if a proper enclosure (ignition protection, coupling protection, contact protection) has been mounted and the operation of the coupling is not affected by the enclosure. The same applies for test runs and rotational direction inspections.

Please observe protection	Drawn:	2022-07-05 Pz/Wb	Replacing:	KTR-N dated 2019-10-09
note ISO 16016.	Verified:	2022-08-05 Pz	Replaced by:	



KTR-N 40226 EN Sheet: 13 of 24 Edition: 6

## 5 Start-up

The cover may provide for openings intended for necessary heat dissipation. These openings have to comply with DIN EN ISO 13857.

The cover must be electrically conductive and included in the equipotential bonding. Bellhousings (magnesium share below 7.5 %) made of <u>aluminium</u> and damping rings (NBR) can be used as connecting element between pump and electric motor. The cover may only be taken off with standstill of the unit.



If the couplings are used in locations subject to dust explosion and in mining the user must make sure that there is no accumulation of dust <u>in a dangerous volume</u> between the cover and the coupling. The coupling must not operate in an accumulation of dust.

For covers with unlocked openings on the top face no light metals must be used if the couplings are used as equipment of equipment group II (*if possible, from stainless steel*). If the couplings are used in mining (equipment group I M2), the cover must not be made of light metal. In addition, it must be resistant to higher mechanical loads than with use as equipment of equipment group II.

During operation of the coupling, please pay attention to

- · different operating noise
- vibrations occurring.



If you note any irregularities with the coupling during operation, the drive unit must be switched off immediately. The cause of the breakdown must be specified by means of the table "Breakdowns" and, if possible, be eliminated according to the proposals. The potential breakdowns specified can be hints only. To find out the cause all operating factors and machine components must be considered.

#### Coating of coupling:



If coated (priming, paintings, etc.) couplings are used in potentially explosive atmospheres, the requirements on conductibility and coating thickness must be considered. With paintings up to 200 µm electrostatic load does not have to be expected. If thicker paintings resp. coatings up to a layer thickness of a maximum of 2.0 mm are applied, the couplings are not permissible for gases and vapours of category IIC in potentially explosive areas, but only for gases and vapours of category IIA and IIB.

This also applies for multiple coatings exceeding an overall thickness of 200 µm. Make sure with painting or coating that the coupling components are conductively connected with the device/devices to be connected so that the equipotential bonding is not impeded by the paint or coat applied. Basically painting of the spider is not admitted to ensure an equipotential bonding.

In addition, make sure that the marking of the coupling remains legible.



KTR-N 40226 EN Sheet: 14 of 24 Edition: 6

### Breakdowns, causes and elimination

The below-mentioned failures can lead to improper use of the **ROTEX**® coupling. In addition to the specifications given in these operating/assembly instructions make sure to avoid such failures.

The errors listed can only be clues to search for the failures. When searching for the failure the adjacent components must generally be considered.



The coupling can become a source of ignition by improper use. Directive 2014/34/EU and UK directive SI 2016 No. 1107 require special care by the manufacturer and the user.

#### **General failures with improper use:**

- Important data for the coupling selection are not forwarded.
- The calculation of the shaft-hub-connection is not considered.
- Coupling components with damage occurred during transport are assembled.
- If the heated hubs are assembled, the permissible temperature is exceeded.
- The clearance of the components to be assembled is not coordinated with one another.
- Tightening torques have been fallen below/exceeded.
- · Components are mixed up by mistake/assembled incorrectly.
- A wrong or no spider is inserted in the coupling.
- No original KTR components (purchased parts) are used.
- Old/already worn out spiders or spiders stored for too long are used.
- · Maintenance intervals are not observed.

Breakdowns	Causes	Hazard notes for potentially explosive atmospheres	Elimination
	Misalignment	Increased temperature on the spider surface; ignition risk by hot surfaces	Set the unit out of operation     Eliminate the reason for the misalignment     (e. g. loose foundation bolts, fracture of the engine mount, heat expansion of unit components, modification of the installation dimension E of the coupling)     For inspection of wear see chapter 10.2
Different operating noise and/or vibrations occuring	Wear of spider, short- term torque transmission due to metal contact	Ignition risk due to sparking	Set the unit out of operation     Disassemble the coupling and remove residues of the spider     Inspect coupling components and replace coupling components that have been damaged     Insert spider, assemble coupling components     Inspect alignment, adjust if necessary
	Screws for axial fastening of hubs working loose	Ignition risk due to hot surfaces and sparking	<ol> <li>Set the unit out of operation</li> <li>Inspect alignment of coupling</li> <li>Tighten the screws to fasten the hubs and secure against working loose</li> <li>For inspection of wear see chapter 10.2</li> </ol>
Fracture of cams	Wear of spider, torque transmission due to metal contact  Fracture of the cams due to high impact energy/overload	Ignition risk due to sparking	<ol> <li>Set the unit out of operation</li> <li>Replace complete coupling</li> <li>Inspect alignment</li> <li>Set the unit out of operation</li> <li>Replace complete coupling</li> <li>Inspect alignment</li> <li>Find out the reason for overload</li> </ol>

Please observe protection	Drawn:	2022-07-05 Pz/Wb	Replacing:	KTR-N dated 2019-10-09
note ISO 16016.	Verified:	2022-08-05 Pz	Replaced by:	



KTR-N 40226 EN Sheet: 15 of 24 Edition: 6

# 6 Breakdowns, causes and elimination

Breakdowns	Causes	Hazard notes for potentially explosive atmospheres	Elimination
Fracture of cams	Operating parameters do not meet with the performance of the coupling  Operating error of the unit	Ignition risk due to sparking	<ol> <li>Set the unit out of operation</li> <li>Review the operating parameters and select a bigger coupling (consider mounting space)</li> <li>Assemble new coupling size</li> <li>Inspect alignment</li> <li>Set the unit out of operation</li> <li>Replace complete coupling</li> <li>Inspect alignment</li> <li>Instruct and train the service staff</li> </ol>
	Misalignment	Increased temperature on the spider surface; ignition risk by hot surfaces	Set the unit out of operation     Eliminate the reason for the misalignment     (e. g. loose foundation bolts, fracture of the engine mount, heat expansion of unit components, modification of the installation dimension E of the coupling)     For inspection of wear see chapter 10.2
Early wear of spider	e. g. contact with aggressive liquids/oils, ozone influence, too high/low ambient temperatures etc. causing physical modification of the spider		<ol> <li>Set the unit out of operation</li> <li>Disassemble the coupling and remove residues of the spider</li> <li>Inspect coupling components and replace coupling components that have been damaged</li> <li>Insert spider, assemble coupling components</li> <li>Inspect alignment, adjust if necessary</li> <li>Make sure that further physical modifications of the spider are excluded</li> </ol>
	Ambient/contact temperatures which are too high for the spider, max. permissible -30 °C/+90 °C	Ignition risk due to sparking with metallic contact of the cams	<ol> <li>Set the unit out of operation</li> <li>Disassemble the coupling and remove residues of the spider</li> <li>Inspect coupling components and replace coupling components that have been damaged</li> <li>Insert spider, assemble coupling components</li> <li>Inspect alignment, adjust if necessary</li> <li>Inspect and adjust ambient/contact temperature (correct by using other spider materials, if necessary)</li> </ol>
Early wear of spider (liquefaction of material inside the spider cam)	Vibrations of drive		<ol> <li>Set the unit out of operation</li> <li>Disassemble the coupling and remove residues of the spider</li> <li>Inspect coupling components and replace coupling components that have been damaged</li> <li>Insert spider, assemble coupling components</li> <li>Inspect alignment, adjust if necessary</li> <li>Find out the reason for the vibrations (possibly corrective by spider with lower or higher Shore hardness)</li> </ol>



When operating with a worn spider (see chapter 10.3) proper operation is not ensured.

Please observe protection	Drawn:	2022-07-05 Pz/Wb	Replacing:	KTR-N dated 2019-10-09
note ISO 16016.	Verified:	2022-08-05 Pz	Replaced by:	



KTR-N 40226 EN Sheet: 16 of 24 Edition: 6

## 7 Disposal

In respect of environmental protection we would ask you to dispose of the packaging resp. products on termination of their service life in accordance with the legal regulations resp. standards that apply.

#### Metal

Any metal components have to be cleaned and disposed of by scrap metal.

#### Nylon materials

Nylon materials have to be collected and disposed of by a waste disposal company.

#### 8 Maintenance and service

**ROTEX**® is a low-maintenance coupling. We recommend to perform a visual inspection on the coupling **at least once a year**. Please pay special attention to the condition of the coupling spiders.

- Since the flexible machine bearings of the driving and driven side settle during the course of load, inspect the alignment of the coupling and re-align the coupling, if necessary.
- The coupling components have to be inspected for damages.
- The screw connections have to be inspected visually.



With the use in potentially explosive atmospheres observe chapter 10.2 "Inspection intervals for couplings in 

potentially explosive atmospheres".

### 9 Spares inventory, customer service addresses

We recommend to store major spare parts on site to ensure the readiness for use of the machine in case if a coupling fails.

Contact addresses of the KTR partners for spare parts and orders can be obtained from the KTR homepage at www.ktr.com.



KTR does not assume any liability or warranty for the use of spare parts and accessories which are not provided by KTR and for the damages which may incur as a result.

**KTR Systems GmbH** 

Carl-Zeiss-Str. 25 D-48432 Rheine

Phone: +49 5971 798-0 E-mail: mail@ktr.com

Please observe protection	Drawn:	2022-07-05 Pz/Wb	Replacing:	KTR-N dated 2019-10-09
note ISO 16016.	Verified:	2022-08-05 Pz	Replaced by:	



KTR-N 40226 EN Sheet: 17 of 24 Edition: 6

10 Enclosure A

Advice and instructions regarding the use in



potentially explosive atmospheres

#### Applicable hub designs/types:

- a) Hubs that may be used in group II, category 2 and 3: (hubs with feather keyway)
  - 7.6 Half shell hub (DH) with feather keyway
  - 7.9 Half shell hub (H) with feather keyway
- b) Hubs which may be used in group II, category 3 only: (hubs without feather keyway)
  - 7.5 Half shell hub (DH) without feather keyway
  - 7.8 Half shell hub (H) without feather keyway



Hubs, clamping hubs or similar types without feather keyway may be used in category 3 only and are marked with category 3 accordingly.



potentially explosive atmospheres

# Conditions of operation in



potentially explosive atmospheres

The ROTEX® couplings are suitable for the use according to directives 2014/34/EU and SI 2016 No. 1107.

- Protection against hazards arising from lightning must follow the lightning protection concept of the machine or plant. The relevant regulations and policy for lightning protection must be observed.
- The equipotential bonding of the couplings is made by metal contact between coupling hub and shaft. This equipotential bonding must not be affected.
- 1. Industry (with the exception of mining)
  - Equipment group II of category 2 and 3 (coupling is not approved/not suitable for equipment group 1)
  - Substance group G (gases, fogs, vapours), zone 1 and 2 (coupling is not approved/not suitable for zone 0)
  - Substance group D (dusts), zone 21 and 22 (coupling is <u>not</u> approved/<u>not</u> suitable for zone 20)
  - Explosion group IIC (gases, fogs, vapours) (explosion groups IIA and IIB are included in IIC) and explosion group IIIC (dusts) (explosion groups IIIA and IIIB are included in IIIC)

#### Temperature class:

Tomporatura alaga	PUR / T-PUR®			
Temperature class	Ambient or operating temperature T <sub>a</sub> 1)	Max. surface temperature 2)		
T4	-30 °C to +90 °C	+110 °C		
T5	-30 °C to +75 °C	+95 °C		
T6	-30 °C to +60 °C	+80 °C		

#### Explanation:

The maximum surface temperatures each result from the maximum permissible ambient or operating temperature  $T_a$  plus the maximum temperature increase  $\Delta T$  of 20 K to be considered. For the temperature class a safety margin subject to standard of 5 K is added.

- 1) The ambient or operating temperature T<sub>a</sub> is limited to +90 °C due to the permissible permanent operating temperature of the elastomers
- 2) The maximum surface temperature of +110 °C applies for the use in locations which are potentially subject to dust explosion.

Please observe protection	Drawn:	2022-07-05 Pz/Wb	Replacing:	KTR-N dated 2019-10-09
note ISO 16016.	Verified:	2022-08-05 Pz	Replaced by:	



KTR-N 40226 EN Sheet: 18 of 24 Edition: 6

#### 10 Enclosure A

Advice and instructions regarding the use in



potentially explosive atmospheres



potentially explosive atmospheres

In potentially explosive atmospheres

- the ignition temperature of dusts generated must at least be 1.5 times the surface temperature to be considered
- the glow temperature must at least be the surface temperature to be considered plus a safety distance of 75 K.
- the gases and vapours generated must amount to the temperature class specified.

#### 2. Mining

Equipment group I of category M2 (*coupling is <u>not</u> approved/<u>not</u> suitable for equipment group M1*). Permissible ambient temperature -30 °C to +90 °C.

# 10.2 Inspection intervals for couplings in potentially explosive atmospheres

Equipment category	Inspection intervals
3G 3D	For couplings operated in zone 2 or zone 22 the inspection and maintenance intervals of the usual operating/assembly instructions for standard operation apply. During the standard operation which has to be taken as a basis of the ignition risk analysis the couplings are free from any ignition source. For gases, vapours and dusts generated the permissible glow and ignition temperatures specified in chapter 10.1 have to be considered and observed.
M2 2G 2D No gases and vapours of explosion group IIC	An inspection of the torsional backlash and a visual inspection of the flexible spider must be performed after 3,000 operating hours for the first time, at the latest after 6 months after start-up of the coupling.  If you note insignificant or no wear on the spider upon this initial inspection, further inspections can each be performed after 6,000 operating hours or at the latest after 18 months, provided that the operating parameters remain the same.  If you note significant wear during the initial inspection so that it would be recommendable to replace the spider, find out the cause according to the table "Breakdowns", if possible.  The maintenance intervals must be adjusted to the modified operating parameters without fail.
M2 2G 2D Gases and vapours of explosion group IIC	An inspection of the torsional backlash and a visual inspection of the flexible spider must be performed after 2,000 operating hours for the first time, at the latest after 3 months after start-up of the coupling.  If you note insignificant or no wear on the spider upon this initial inspection, further inspections can each be performed after 4,000 operating hours or at the latest after 12 months, provided that the operating parameters remain the same.  If you note significant wear during the initial inspection so that it would be recommendable to replace the spider, find out the cause according to the table "Breakdowns", if possible.  The maintenance intervals must be adjusted to the modified operating parameters without fail.



Hubs, clamping hubs or similar types without feather keyway may be used in category 3 only and are marked with category 3 accordingly.

Please observe protection	Drawn:	2022-07-05 Pz/Wb	Replacing:	KTR-N dated 2019-10-09
note ISO 16016.	Verified:	2022-08-05 Pz	Replaced by:	



40226 EN KTR-N Sheet: 19 of 24 Edition: 6

**Enclosure A** 10

Advice and instructions regarding the use in




potentially explosive atmospheres

10.2 Inspection intervals for couplings in



potentially explosive atmospheres

### **ROTEX®** coupling

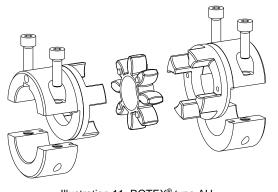



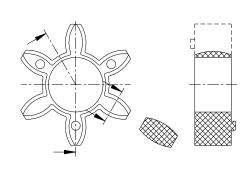


Illustration 12: ROTEX® spider

Here the backlash between the cams of the coupling and the flexible spider must be inspected by means of a

When reaching the wear limit *maximum friction*, the spider must be replaced immediately, irrespective of the inspection intervals.

Please observe protection	Drawn:	2022-07-05 Pz/Wb	Replacing:	KTR-N dated 2019-10-09
note ISO 16016.	Verified:	2022-08-05 Pz	Replaced by:	



KTR-N 40226 EN Sheet: 20 of 24 Edition: 6

10 Enclosure A

Advice and instructions regarding the use in



potentially explosive atmospheres

#### 10.3 Standard values of wear

In case of backlash > X mm, the flexible spider must be replaced.

Monitoring of the general condition of the coupling can be done both at standstill and during operation. If the coupling is tested during operation, the operator must ensure an appropriate and proven test procedure (e. g. stroboscopic lamp, high-speed camera, etc.) which is definitely comparable to testing at standstill. If any distinctive features occur, an inspection must be made with the machine stopped.

Reaching the limits for replacing depends on the operating conditions and the existing operating parameters.



In order to ensure a long service life of the coupling and avoid hazards with the use in potentially explosive atmospheres, the shaft ends must be accurately aligned. Please absolutely observe the displacement figures specified (see tables 3 and 4). If the figures are exceeded, the coupling will be damaged.

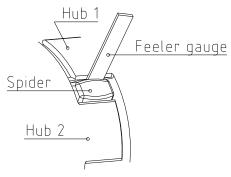


Illustration 13: Inspection of the limit of wear

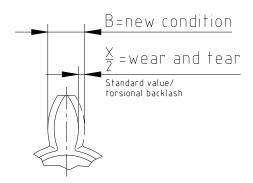


Illustration 14: Wear of spider

#### Table 5:

Size	Limits of wear (friction)	Size	Limits of wear (friction)
Size	X <sub>max.</sub> [mm]	Size	X <sub>max.</sub> [mm]
19	3	65	5
24	3	75	6
28	3	90	8
38	3	100	9
42	4	110	9
48	4	125	10
55	5		

Please observe protection	Drawn:	2022-07-05 Pz/Wb	Replacing:	KTR-N dated 2019-10-09
note ISO 16016.	Verified:	2022-08-05 Pz	Replaced by:	



KTR-N 40226 EN Sheet: 21 of 24 Edition: 6

#### 10 Enclosure A

Advice and instructions regarding the use in



potentially explosive atmospheres



marking of coupling for potentially explosive atmospheres

The explosion protection marking of the ROTEX® coupling is applied on the outer sheath or on the front side. The flexible spider is excluded.

For the complete marking refer to the operating/assembly instructions and/or the delivery note/package.

#### The following marking applies for the products:

Type without aluminium, with feather keyway (Category 2)

```
I M2
                     Ex h
                                                                Mb
                                                                       X
X
X
                              IIC
            II 2G
                                     T6
                     Ex h
                                                                Gb
                             IIIC T80 °C
                                                ... T110 °C Db
                     Ex h
<Year>
                     -30 \, ^{\circ}\text{C} \le T_a \le +60 \, ^{\circ}\text{C}
                                                 ... +90 °C
KTR Systems GmbH, Carl-Zeiss-Str. 25, D-48432 Rheine
```

Type without aluminium, without feather keyway (Category 3)

```
I M2 Ex h I Mb X
II 3G Ex h IIC T6 ... T4 Gc X
II 3D Ex h IIIC T80 °C ... T110 °C Dc X

<Year> -30 °C ≤ Ta ≤ +60 °C ... +90 °C
KTR Systems GmbH, Carl-Zeiss-Str. 25, D-48432 Rheine
```

### **Short marking:**

(A short marking is only made if not possible differently for reason of space or functioning.)

ROTEX® <Year>



#### **Deviating marking applied until 31st October 2019:**

Short marking: II 2GD c IIC T X/I M2 c X

Complete marking: (valid for T-PUR® only) (valid for T-PUR® only) Il 2G c IIC T6, T5, T4 resp. T3 -50 °C  $\leq$  Ta  $\leq$  +65 °C, +80 °C, +115 °C resp. +120 °C Il 2D c T 140 °C/I M2 c -50 °C  $\leq$  Ta  $\leq$  +120 °C

Complete marking: (valid for PUR only) II 2G c IIC T6, T5 resp. T4 -30 °C  $\le$  Ta  $\le$  +65 °C, +80 °C resp. +90 °C II 2D c T 110 °C/I M2 c -30 °C  $\le$  Ta  $\le$  +90 °C



KTR-N 40226 EN Sheet: 22 of 24 Edition: 6

10 Enclosure A

Advice and instructions regarding the use in



potentially explosive atmospheres



# marking of coupling for potentially explosive atmospheres

#### **Comments on marking**

Equipment group I	Mining
Equipment group II	Non-mining
Equipment category 2G	Equipment ensuring a high level of safety, suitable for zone 1
Equipment category 3G	Equipment ensuring a normal level of safety, suitable for zone 2
Equipment category 2D	Equipment ensuring a high level of safety, suitable for zone 21
Equipment category 3D	Equipment ensuring a normal level of safety, suitable for zone 22
Equipment category M2	Equipment ensuring a high level of safety must be able to be switched off
	when an explosive atmosphere occurs
D G	Dust
G	Gases and vapours
Ex h	Nonelectrical explosion protection
IIC	Gases and vapours of class IIC (including IIA and IIB)
IIIC	Electrically conductive dusts of class IIIC (including IIIA and IIIB)
T6 T4	Temperature class to be considered, depending on the ambient temperature
T80 °C T110 °C	Maximum surface temperature to be considered, depending on the ambient
	temperature
$-30  ^{\circ}\text{C} \le T_a \le +60  ^{\circ}\text{C} \dots +90  ^{\circ}\text{C}$ or	Permissible ambient temperature from -30 °C to +60 °C resp.
-30 °C ≤ T <sub>a</sub> ≤ +90 °C	-30 °C to +90 °C
Gb, Db, Mb	Equipment protection level, high level of safety, analogous to the equipment
	category
Gc, Dc	Equipment protection level, normal level of safety, analogous to the
	equipment category
X	For a safe use of the couplings particular conditions apply

If the symbol ⓐ was punched in addition to marking ②, the coupling component was supplied by KTR as an unbored or pilot bored version (see chapter 4.2 of the present operating/assembly instructions).

Please observe protection	Drawn:	2022-07-05 Pz/Wb	Replacing:	KTR-N dated 2019-10-09
note ISO 16016.	Verified:	2022-08-05 Pz	Replaced by:	



KTR-N 40226 EN Sheet: 23 of 24 Edition: 6

10 Enclosure A

Advice and instructions regarding the use in



potentially explosive atmospheres

#### 10.5 EU Certificate of conformity

# **EU Declaration of Conformity resp. Certificate of Conformity**

corresponding to EU directive 2014/34/EU dated 26 February 2014 and to the legal regulations adopted for its implementation

The manufacturer - KTR Systems GmbH, Carl-Zeiss-Str. 25, D-48432 Rheine - states that the

## flexible ROTEX® couplings

in an explosion-proof design described in these assembly instructions are equipment resp. components corresponding to article 2, 1. of directive 2014/34/EU and comply with the general safety and health specifications according to enclosure II of directive 2014/34/EU. This declaration of conformity is issued under the sole responsibility of the manufacturers KTR Systems GmbH.

The coupling described in here complies with the specifications of the following standards/rules:

EN ISO 80079-36:2016-12 EN ISO 80079-37:2016-12 EN ISO/IEC 80079-38:2017-10 IEC/TS 60079-32-1:2020-01-24

The ROTEX® is in accordance with the specifications of directive 2014/34/EU.

According to article 13 (1) b) ii) of directive 2014/34/EU the technical documentation is deposited with the notified body (type examination certificate IBExU13ATEXB016 X):

**IBExU** 

Institut für Sicherheitstechnik GmbH Identification number: 0637

Fuchsmühlenweg 7

09599 Freiberg

Rheine, 2022-07-05 Place Date

Reinhard Wibbeling Engineering/R&D Michael Brüning Product Manager

Please observe protection	Drawn:	2022-07-05 Pz/Wb	Replacing:	KTR-N dated 2019-10-09
note ISO 16016.	Verified:	2022-08-05 Pz	Replaced by:	



KTR-N 40226 EN Sheet: 24 of 24 Edition: 6

10 Enclosure A

Advice and instructions regarding the use in



potentially explosive atmospheres

## 10.6 UK Declaration of conformity

# UK Declaration of Conformity resp. Certificate of Conformity

corresponding to UK directive SI 2016 No. 1107 dated 26 February 2014 and to the legal provisions adopted for its implementation

The manufacturer - KTR Systems GmbH, Carl-Zeiss-Str. 25, D-48432 Rheine - states that the

## flexible ROTEX® couplings

in an explosion-proof design described in these assembly instructions are equipment resp. components corresponding to directive SI 2016 No. 1107 and comply with the general safety and health requirements according to directive SI 2016 No. 1107.

This declaration of conformity resp. certificate of conformity is issued under the sole responsibility of the manufacturer KTR Systems GmbH.

The coupling described in here complies with the specifications of the following standards/rules:

EN ISO 80079-36:2016-12 EN ISO 80079-37:2016-12 EN ISO/IEC 80079-38:2017-10 IEC/TS 60079-32-1:2020-01-24

The ROTEX® is in accordance with the specifications respectively the applicable specifications of directive SI 2016 No. 1107.

According to directive SI 2016 No. 1107 the technical documentation is deposited with the notified body:

**Eurofins CML** 

Identification number: 2503

Rheine, 2022-07-05 Place Date

Reinhard Wibbeling Engineering/R&D Michael Brüning Product Manager

Please observe protection	Drawn:	2022-07-05 Pz/Wb	Replacing:	KTR-N dated 2019-10-09
note ISO 16016.	Verified:	2022-08-05 Pz	Replaced by:	