


KTR-N 40817 EN Sheet: 1 of 7 Edition: 6

### **CLAMPEX® KTR 250**

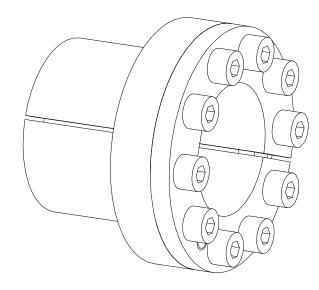

The **CLAMPEX**<sup>®</sup> **clamping set** is a frictionally engaged, detachable shaft-hub-connection for cylindrical shafts and bores without feather key.

### Table of contents


1	Technical data	2
2	Advice	3
	<ul> <li>2.1 General advice</li> <li>2.2 Safety and advice symbols</li> <li>2.3 General hazard warnings</li> <li>2.4 Intended use</li> </ul>	3 3 3 4
3	Storage, transport and packaging	4
	<ul><li>3.1 Storage</li><li>3.2 Transport and packaging</li></ul>	4
4	Assembly	5
	<ul> <li>4.1 Components of clamping set CLAMPEX® KTR 250</li> <li>4.2 Assembly of the clamping set</li> <li>4.3 Disassembly of clamping set</li> </ul>	5 5 6
5	Disposal	7
6	Spares inventory, customer service addresses	7
7	Advice regarding the use in hazardous locations according to EU directive 2014/34/EU	7

Please observe protection	Drawn:	2016-09-09 Shg/Jh	Replacing:	KTR-N dated 2011-05-23
note ISO 16016.	Verified:	2016-09-09 Shg	Replaced by:	



KTR-N 40817 EN Sheet: 2 of 7 Edition: 6

#### 1 Technical data

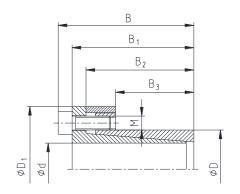

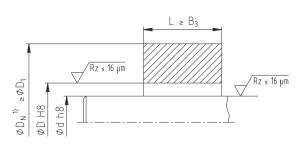


Illustration 1: CLAMPEX® KTR 250

- Dimension D<sub>N</sub>: For calculation of hub see catalogue "Drive Technology".
- 2) These are the maximum screw tightening torques. They can be reduced by a maximum of 40 % of the figures specified, with T, Fax, Pw and PN declining proportionally.

Table 1:

Dimensions [mm]				D	IN EN ÍSC	ng screws O 4762 - 12. = 0.14			nittable axial force	Surface between cl [N/m	amping set	Weight		
d x D	В	B <sub>1</sub>	B <sub>2</sub>	B <sub>3</sub>	D <sub>1</sub>	М	Length	z Quantity	T <sub>A</sub> <sup>2)</sup> [Nm]	T [Nm]	F <sub>ax</sub> [kN]	Shaft P <sub>w</sub>	Hub P <sub>N</sub>	[kg]
6 x 14	24.5	21.5	18.5	10.0	25	М3	10	4	2.6	11	4	162	69	0.05
8 x 15	29	25	21.5	11.5	27	M4	10	3	5.6	26	7	187	100	0.05
9 x 16	30	26	22.5	14.0	28	M4	10	4	5.6	37	8	173	97	0.06
10 x 16	30	26	22.5	14.0	29	M4	10	4	5.6	42	8	159	99	0.16
11 x 18	30	26	22.5	13.5	32	M4	10	4	5.6	50	9	162	99	0.18
12 x 18	30	26	22.5	13.5	32	M4	10	4	5.6	55	9	150	100	0.18
14 x 23	30	26	22.5	14	38	M4	10	6	5.6	100	14	193	118	0.20
15 x 24	42	36	28.5	16	44	M6	18	4	15	145	19	214	134	0.2
16 x 24	42	36	28.5	16	44	M6	18	4	15	155	19	201	134	0.30
17 x 25	42	36	28.5	16	45	M6	18	4	15	162	19	186	126	0.2
17 x 26	44	38	31	18	47	M6	18	4	17	180	21	184	120	0.2
18 x 26	44	38	31	18	47	M6	18	4	17	200	22	182	126	0.2
19 x 27	44	38	31	18	48	M6	18	4	17	210	22	171	121	0.3
20 x 28	44	38	31	18	49	M6	18	4	17	220	22	162	116	0.2
22 x 32	51	45	38	25	54	M6	18	4	17	250	23	110	75	0.3
24 x 34	51	45	38	25	56	M6	18	4	17	270	23	99	70	0.3
25 x 34	51	45	38	25	56	M6	18	4	17	280	22	95	70	0.3
28 x 39	51	45	38	25	61	M6	18	6	17	480	34	130	93	0.4
30 x 41	51	45	38	25	62	M6	18	6	17	510	34	120	88	0.4
32 x 43	51	45	38	25	65	M6	18	8	17	730	46	151	113	0.50
35 x 47	56	50	43	30	69	M6	18	8	17	800	46	115	86	0.5
38 x 50	56	50	43	30	72	M6	18	8	17	860	45	105	80	0.6
40 x 53	56	50	43	30	75	M6	18	8	17	900	45	99	75	0.6
42 x 55	65	57	49	32	78	M8	22	8	41	1800	86	169	129	0.9
45 x 59	73	65	57	40	85	M8	22	8	41	1900	84	124	95	1.0
48 x 62	78	70	62	45	87	M8	22	8	41	2000	83	102	79	1.0
50 x 65	78	70	62	45	92	M8	22	10	41	2600	104	123	94	1.3
55 x 71	83	75	67	50	98	M8	22	10	41	2900	105	102	79	1.5
60 x 77	83	75	67	50	104	M8	22	10	41	3100	103	91	71	1.7
65 x 84	83	75	67	50	111	M8	22	10	41	3400	105	85	66	1.9
70 x 90	101	91	80	60	119	M10	25	10	83	5800	166	105	81	2.9
75 x 95	101	91	80	60	126	M10	25	10	83	6200	165	97	77	2.3
80 x 100	106	96	85	65	131	M10	25	12	83	8000	200	102	82	3.3
85 x 106	106	96	85	65	137	M10	25	12	83	8500	200	96	77	3.6
90 x 112	106	96	85	65	143	M10	25	15	83	11200	249	113	91	3.9
95 x 120	106	96	85	65	153	M10	25	15	83	11800	248	107	84	4.5
100 x 125	114	102	89	65	162	M12	30	12	145	14600	292	119	95	5.5
110 x 140	140	128	114	90	180	M12	30	12	145	16000	291	78	61	8.0
120 x 155	140	128	114	90	198	M12	30	12	145	17400	290	71	55	10.5
130 x 165	140	128	114	90	208	M12	30	16	145	25000	385	87	69	11.9

Please observe protection	Drawn:	2016-09-09 Shg/Jh	Replacing:	KTR-N dated 2011-05-23
note ISO 16016.	Verified:	2016-09-09 Shg	Replaced by:	



KTR-N 40817 EN Sheet: 3 of 7 Edition: 6

#### 1 Technical data

#### Tolerances, surfaces

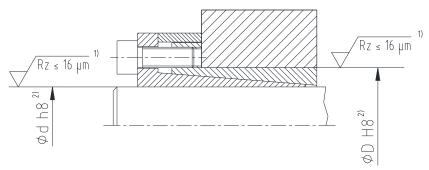


Illustration 2:Tolerances and surfaces (example: CLAMPEX® KTR 250)

- 1) One proper turning process is sufficient (Rz ≤ 16 μm).
- Highest permissible tolerance of hub or shaft.

#### 2 Advice

#### 2.1 General advice

Please read through these operating/assembly instructions carefully before you mount the clamping set. Please pay special attention to the safety instructions!

The operating/assembly instructions are part of your product. Please store them carefully and close to the clamping set. The copyright for these operating/assembly instructions remains with KTR.

#### 2.2 Safety and advice symbols



Warning of potentially explosive atmospheres

This symbol indicates notes which may contribute to preventing bodily injuries or serious bodily injuries that may result in death caused by explosion.



Warning of personal injury

This symbol indicates notes which may contribute to preventing bodily injuries or serious bodily injuries that may result in death.



Warning of product damages

This symbol indicates notes which may contribute to preventing material or machine damage.



**General advice** 

This symbol indicates notes which may contribute to preventing adverse results or conditions.

#### 2.3 General hazard warnings



With assembly and disassembly of the clamping set it has to be made sure that the entire drive train is secured against accidental switch-on. You may be seriously hurt by rotating parts. Please make absolutely sure to read through and observe the following safety indications.

- All operations on and with the clamping set have to be performed taking into account "safety first".
- Please make sure to switch off the power pack before you perform your work on the clamping set.
- Secure the power pack against accidental switch-on, e. g. by providing warning signs at the place of switch-on or removing the fuse for current supply.
- Do not reach into the operation area of the machine as long as it is in operation.
- Please secure the rotating drive components against accidental contact. Please provide for the necessary protection devices and covers.

Please observe protection	Drawn:	2016-09-09 Shg/Jh	Replacing:	KTR-N dated 2011-05-23
note ISO 16016.	Verified:	2016-09-09 Shg	Replaced by:	



KTR-N 40817 EN Sheet: 4 of 7 Edition: 6

2 Advice

#### 2.4 Intended use

You may only assemble and disassemble the clamping set if you

- have carefully read through the operating/assembly instructions and understood them
- · had technical training
- · are authorized by your company

The clamping set may only be used in accordance with the technical data (see table 1). Unauthorized modifications on the clamping set are not admissible. We will not assume liability for any damage that may arise. In the interest of further development we reserve the right for technical modifications.

The clamping set described in here corresponds to the technical status at the time of printing of these operating/assembly instructions.

#### 3 Storage, transport and packaging

#### 3.1 Storage

The clamping sets are supplied in preserved condition and can be stored at a dry and roofed place for 6 - 9 months.



Humid storage rooms are not suitable. Please make sure that condensation is not generated.

#### 3.2 Transport and packaging

The clamping sets are packed differently each depending on size, quantity and kind of transport. Unless otherwise contractually agreed, packaging will follow the in-house packaging specifications of KTR.



In order to avoid any injuries and any kind of damage please always make use of proper transport and lifting equipment.

Please observe protection	Drawn:	2016-09-09 Shg/Jh	Replacing:	KTR-N dated 2011-05-23
note ISO 16016.	Verified:	2016-09-09 Shg	Replaced by:	



KTR-N 40817 EN Sheet: 5 of 7 Edition: 6

#### 4 Assembly

Generally the clamping set is supplied in mounted condition. Before assembly the clamping set has to be inspected for completeness.

#### 4.1 Components of clamping set CLAMPEX® KTR 250

Component	Quantity	Description
1	1	Outer ring (slit)
2	1	Inner ring (slit)
3	1	Axial ring
4	see table 1	Cap screw DIN EN ISO 4762

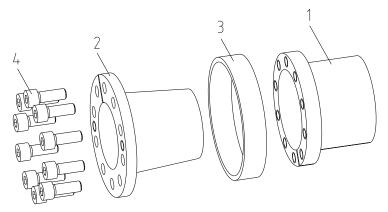


Illustration 3: CLAMPEX® KTR 250



With assembly none of the pull-off threads of the internal ring may be congruent with the slot of the external ring.



Dirty or used clamping sets have to be disassembled and cleaned before assembly. Afterwards apply thin fluid oil lightly (e. g. Ballistol Universal oil or Klüber Quietsch-Ex).

#### 4.2 Assembly of the clamping set

- 1. Please inspect shaft and hub fit for the tolerance specified (h8/H8).
- 2. Clean the contact surfaces of the clamping set and of shaft and hub and afterwards apply thin fluid oil lightly (see illustration 4) (e. g. Ballistol Universal oil or Klüber Quietsch-Ex).

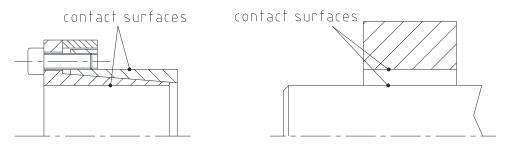


Illustration 4: Cleaning the contact surfaces



Oils and greases with molybdenum disulphide or high-pressure additives, additives of Teflon and silicone as well as internal lubricants reducing the coefficient of friction significantly must not be used. When mounting the tapers of the clamping set free from oil the tabular and calculated parameters deviate.

Please observe protection	Drawn:	2016-09-09 Shg/Jh	Replacing:	KTR-N dated 2011-05-23
note ISO 16016.	Verified:	2016-09-09 Shg	Replaced by:	



KTR-N 40817 EN Sheet: 6 of 7 Edition: 6

#### 4 Assembly

#### 4.2 Assembly of the clamping set

3. Release the clamping screws slightly. To facilitate the assembly fasten the internal and external ring by two clamping screws each via the pull-off threads (see illustration 5). Insert the clamping set KTR 250 between shaft and hub.

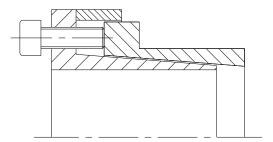


Illustration 5: Fastening the clamping set KTR 250

- 4. Remove the clamping screws used for fastening and screw them into the threads of the external ring.
- 5. Lightly tighten the clamping screws manually and align the clamping set with hub part.
- 6. Make sure with KTR 250 that the axial back-up ring (component 3) fits the hub evenly.
- 7. Tighten the clamping screws evenly crosswise step by step to the tightening torque specified in table 1 or 2. Repeat this process until all clamping screws have reached the tightening torque.

#### 4.3 Disassembly of clamping set



Driving components released or falling down may cause injury to persons or damage on the machine.

Secure the driving components before disassembly.

- 1. Untighten and unscrew all clamping screws evenly and one after another.
- 2. Screw the clamping screws into the pull-off threads of the internal ring (component 2) (see illustration 6).
- 3. Tighten the clamping screws evenly crosswise by 1/4 revolution. Increase the pull-off torque gradually until the external ring (component 1) and internal ring (component 2) are separated.
- 4. Take out the clamping set released between shaft and hub.

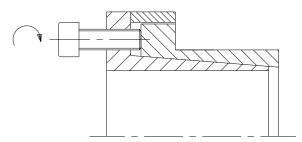


Illustration 6: Releasing the clamping set KTR 250



If these hints are not observed or operating conditions are not taken into account with the selection of the clamping set, the operation of the clamping set may be affected.

Please observe protection	Drawn:	2016-09-09 Shg/Jh	Replacing:	KTR-N dated 2011-05-23
note ISO 16016.	Verified:	2016-09-09 Shg	Replaced by:	



KTR-N 40817 EN Sheet: 7 of 7 Edition: 6

#### 5 Disposal

In respect of environmental protection we would ask you to dispose of the packaging or products on termination of their service life in accordance with the legal regulations and standards that apply, respectively.

All clamping sets consist of metal. Any metal components have to be cleaned and disposed of by scrap metal.

#### 6 Spares inventory, customer service addresses

A basic requirement to ensure the readiness for use of the drive components is a stock of some clamping sets on site.

Contact addresses of the KTR partners for spare parts and orders can be obtained from the KTR homepage at www.ktr.com.



KTR does not assume any liability or warranty for the use of spare parts and accessories which are not provided by KTR and for the damages which may incur as a result.

# 7 Advice regarding the use in hazardous locations according to EU directive 2014/34/EU

If used in hazardous locations the type and size of clamping set (for category 3 only) has to be selected such that the difference between the peak torque of the machine including all operating parameters and the rated torque of the clamping hub at least corresponds to a safety factor of s = 2.0.

CLAMPEX® clamping sets are not part of directive 2014/34/EU, since

- this product is a torsionally rigid, backlash-free, frictionally engaged connection with one or more taper clamping ring(s) ensured by several screws.
   (Clamping screws have to be secured, e. g. by means of a medium strength adhesive.)
- due to the design of clamping sets a fracture/failure is not likely (frictional heat is only caused by improper assembly/tightening torques, i. e. not with intended use).